




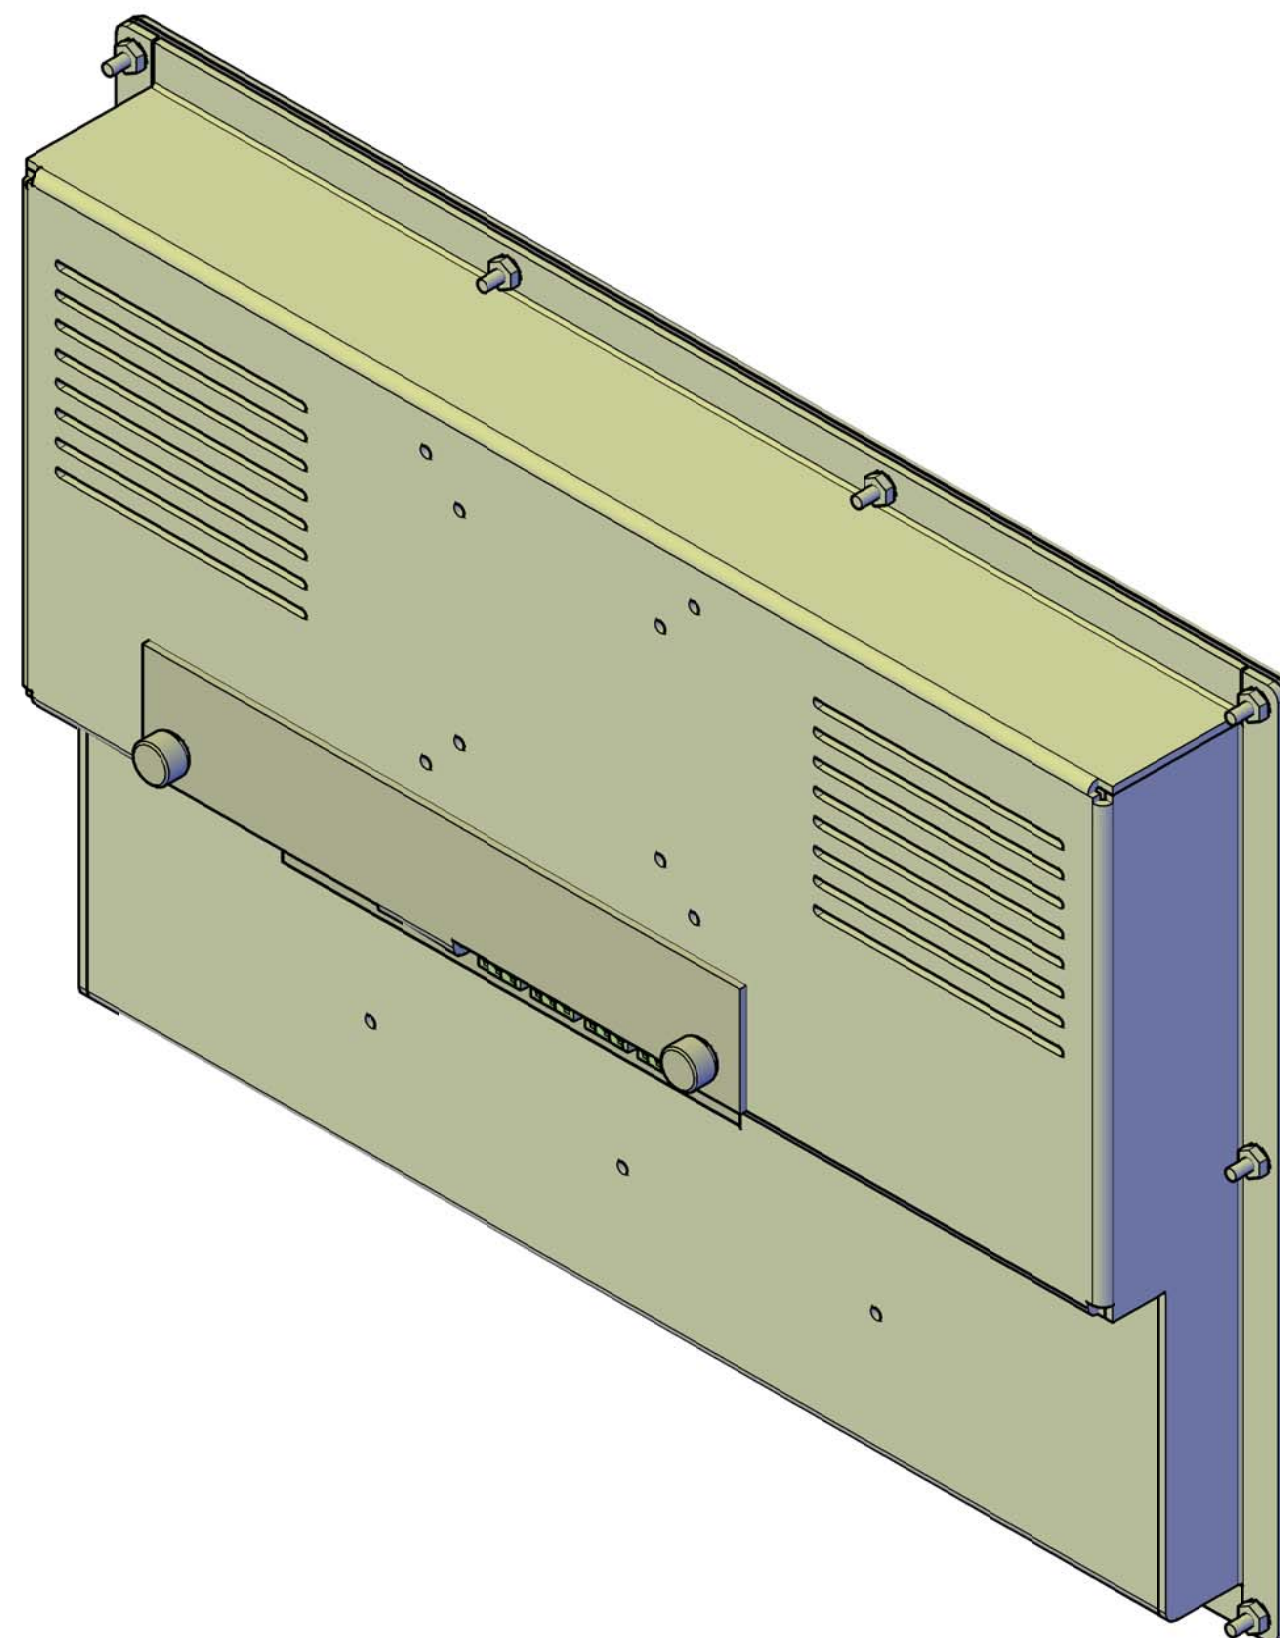

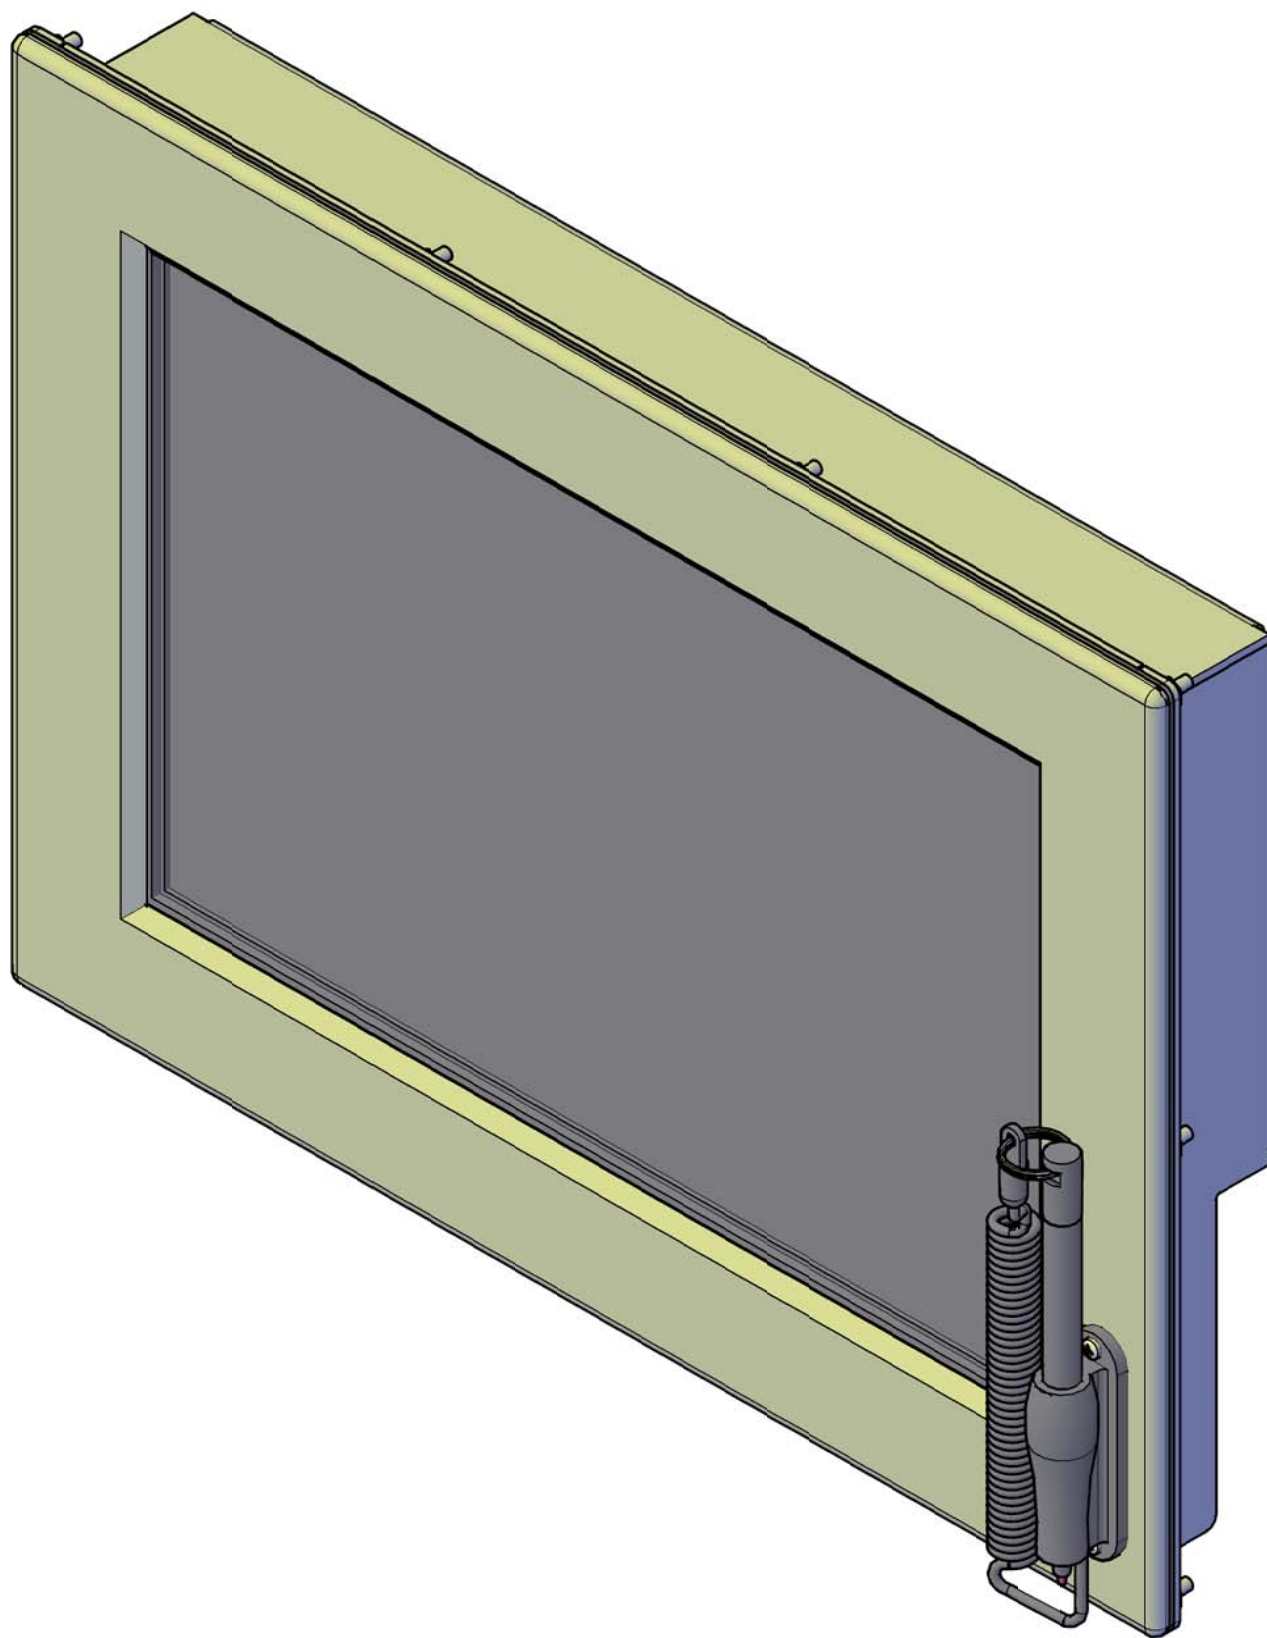

Step 1: Disassembly MCS-TOUCH-15.4IN-D

- A) Unscrew #6-32 Kep Nut w/Ext Toothwasher Steel Zinc (Qty: 10).
- B) Remove MCS-TOUCH-15.4IN-VERSA-MOUNT.

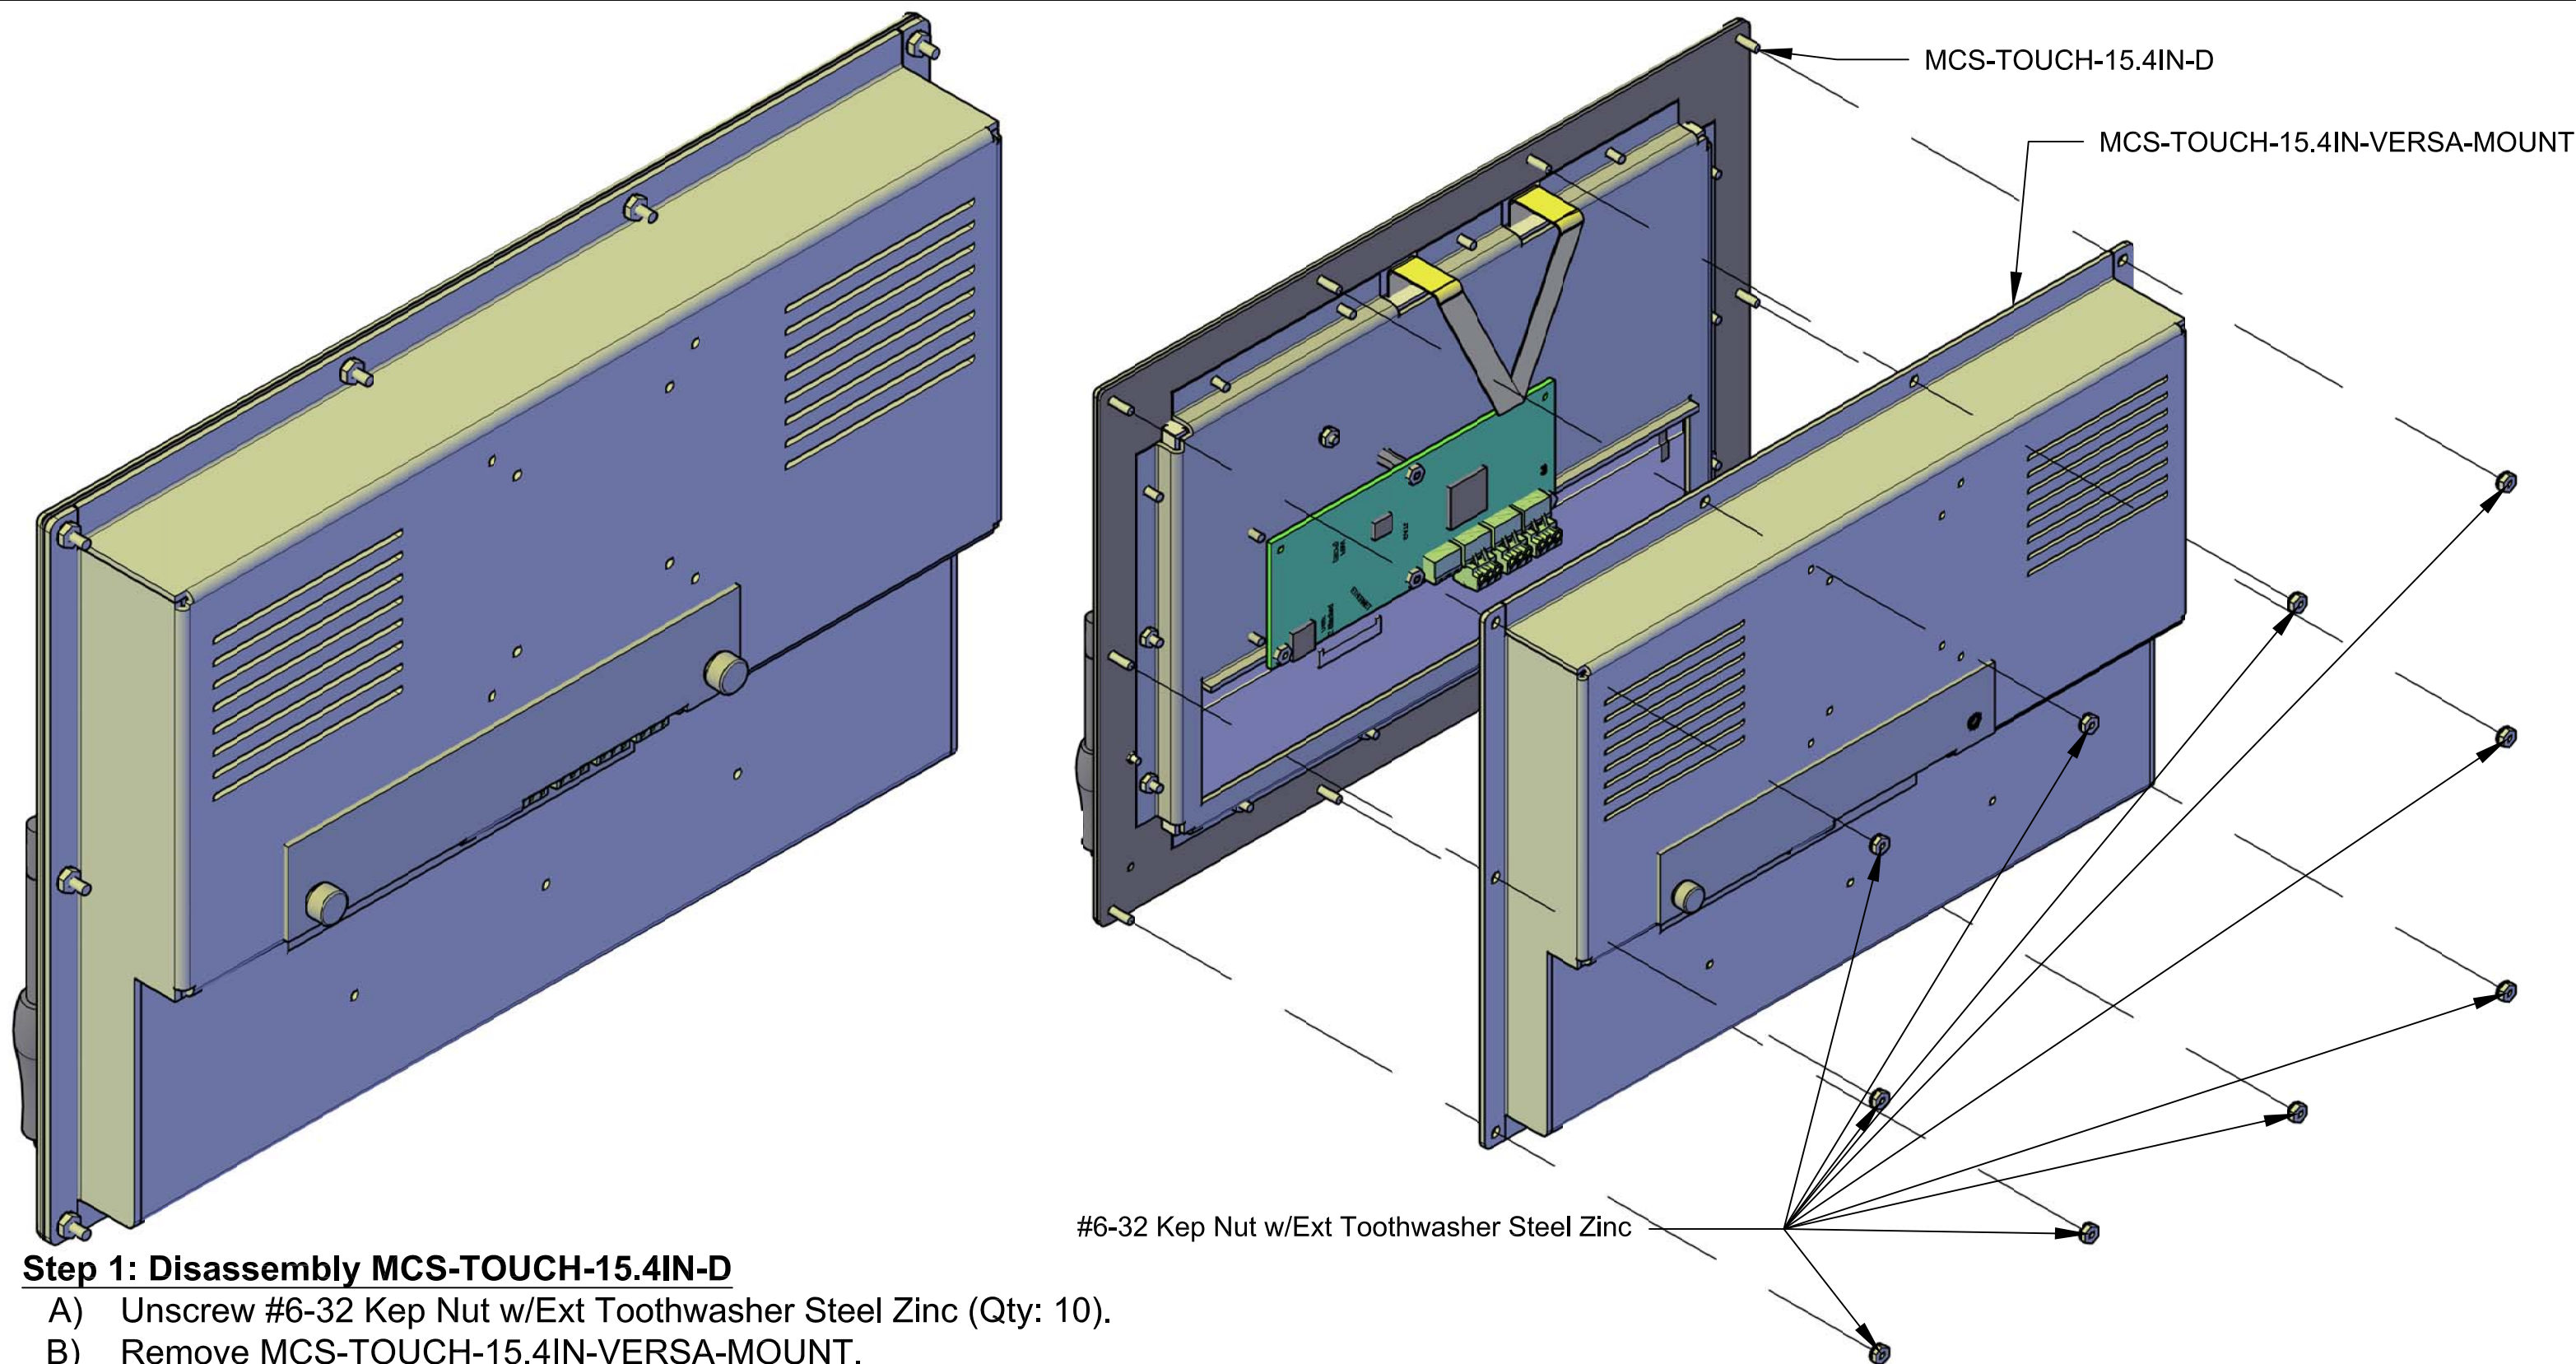


MCS-TOUCH-15.4IN-D

Cutout Area Dimension Drawing

Outline of
MCS-TOUCH-15.4IN-D

Customer Supplied Enclosure

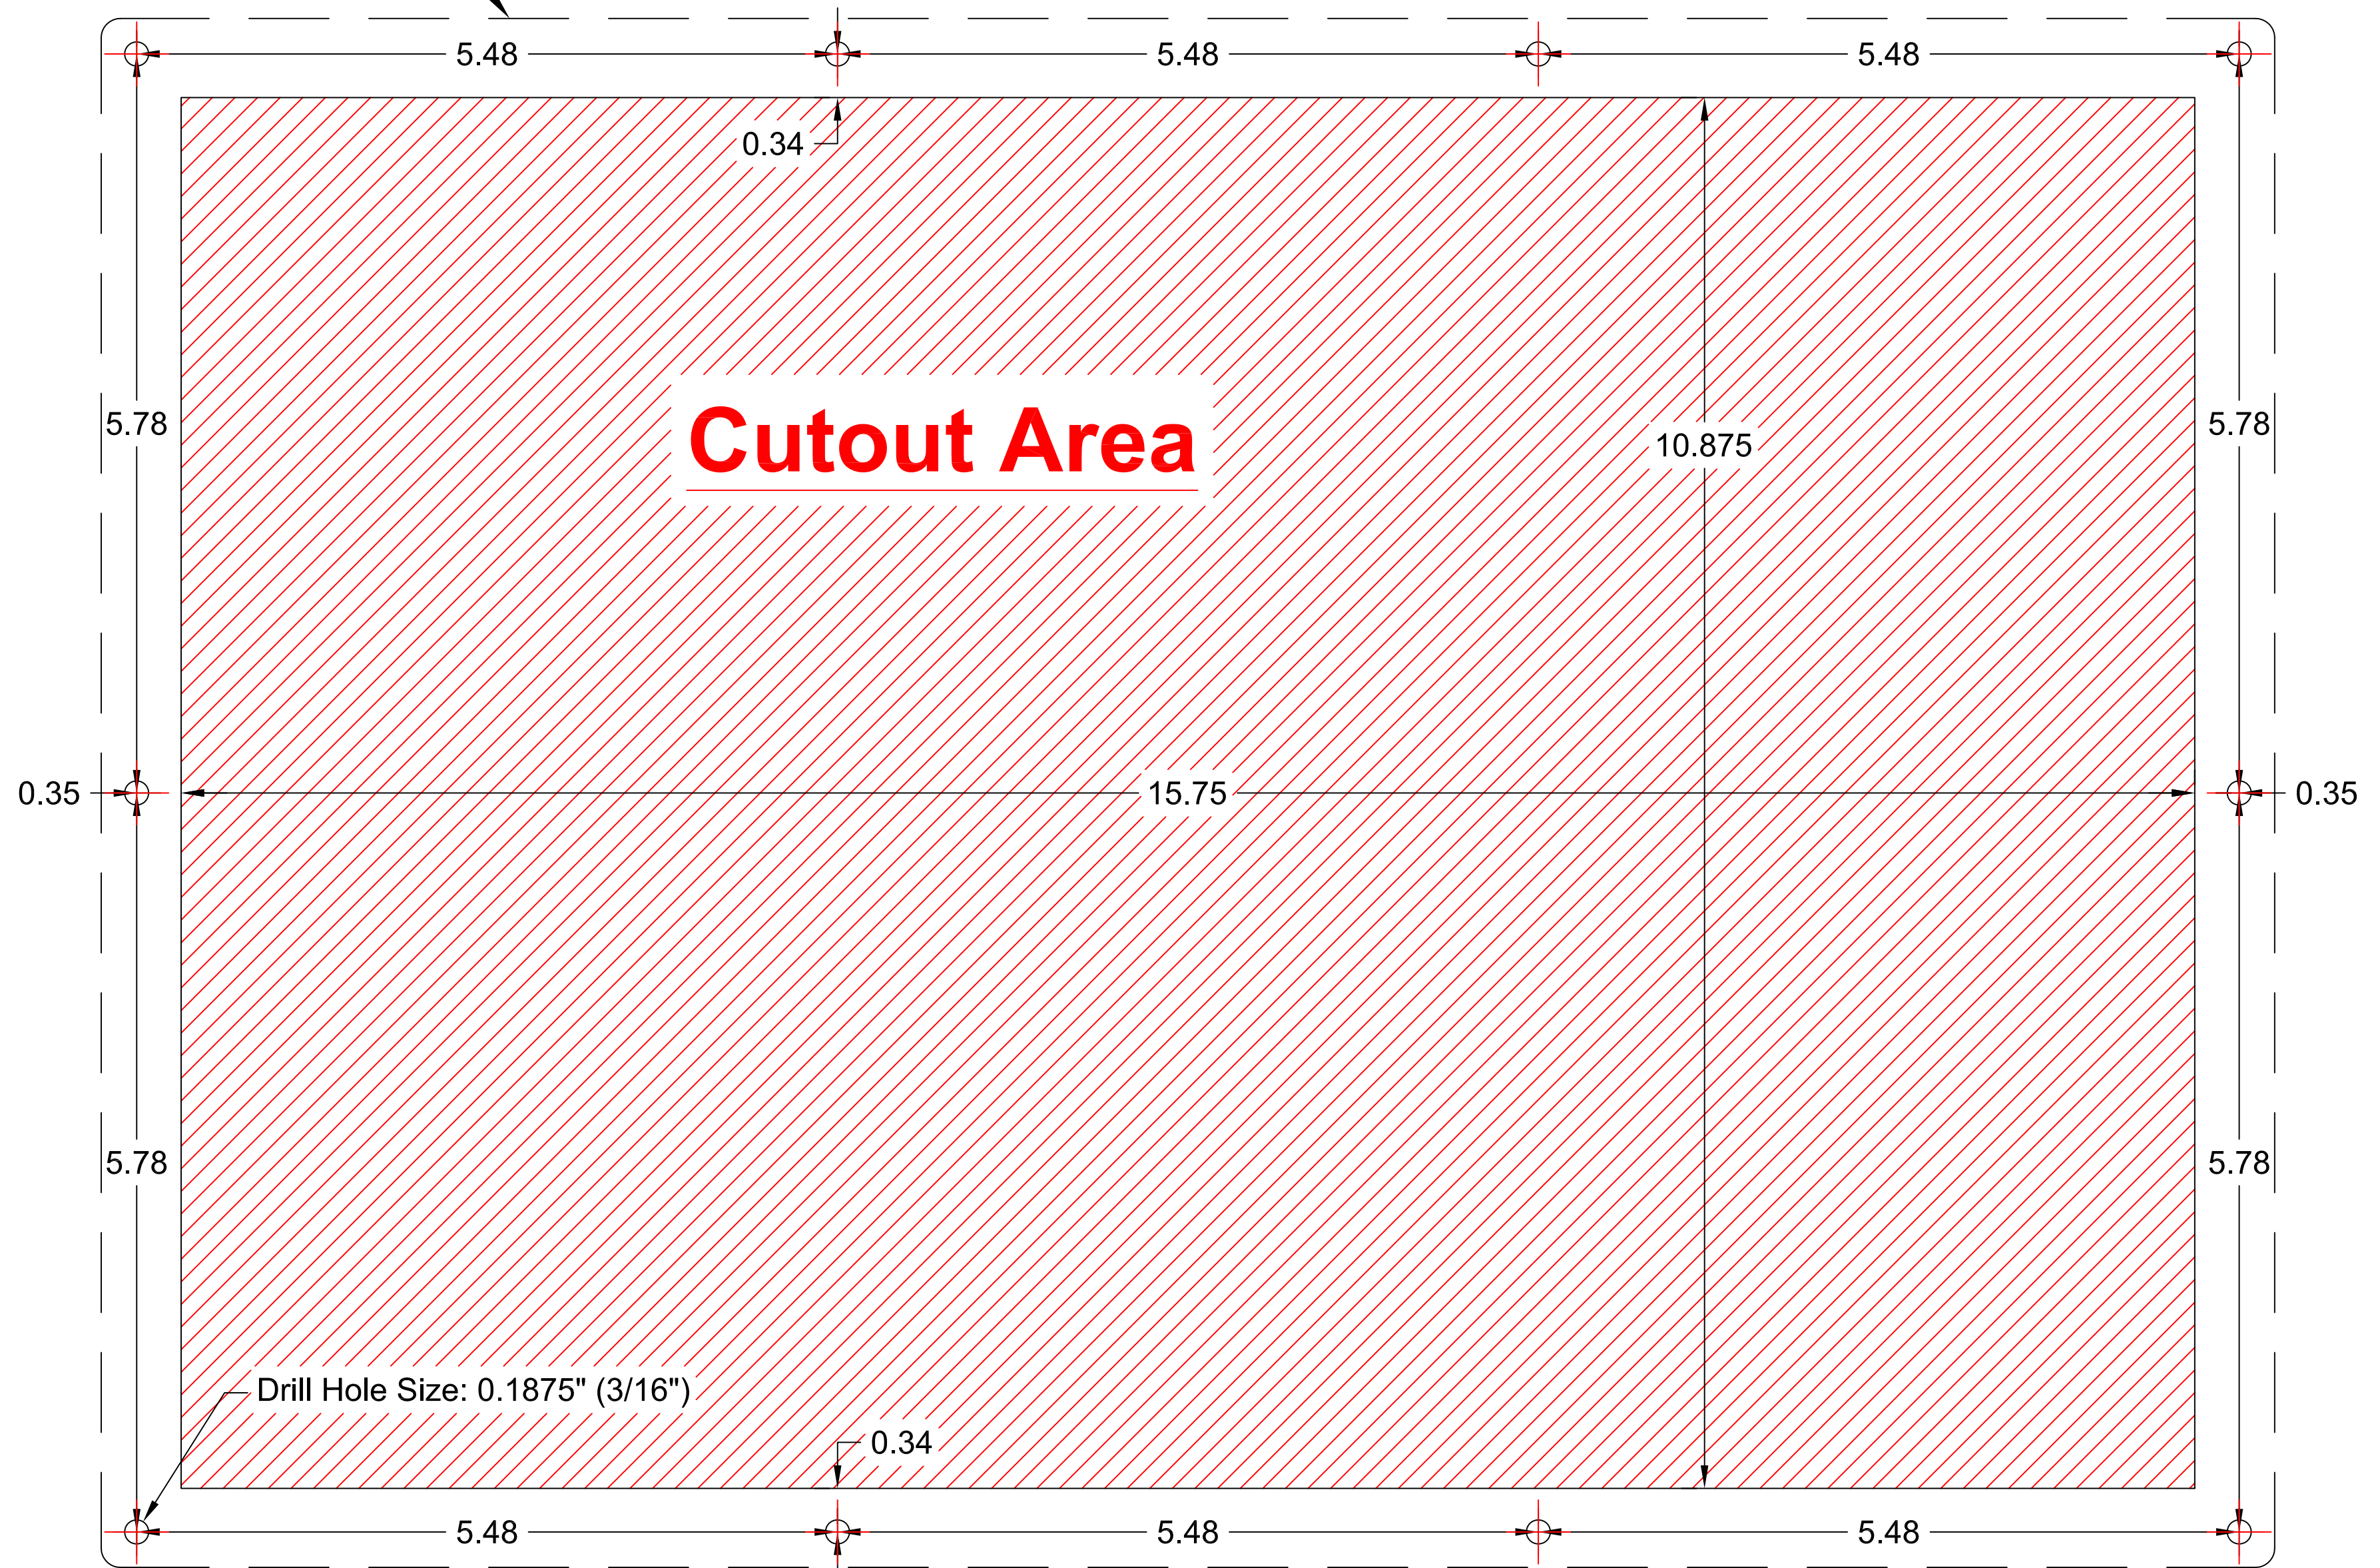


View: Front

Scale: 1:1

Print Size: 17 x 22 (ANSI C)

5580 Enterprise Pkwy., Fort Myers, FL 33905
Office: 239-694-0089 Fax: 239-694-0031 www.mcscontrols.com

Revision: 2021-07-21

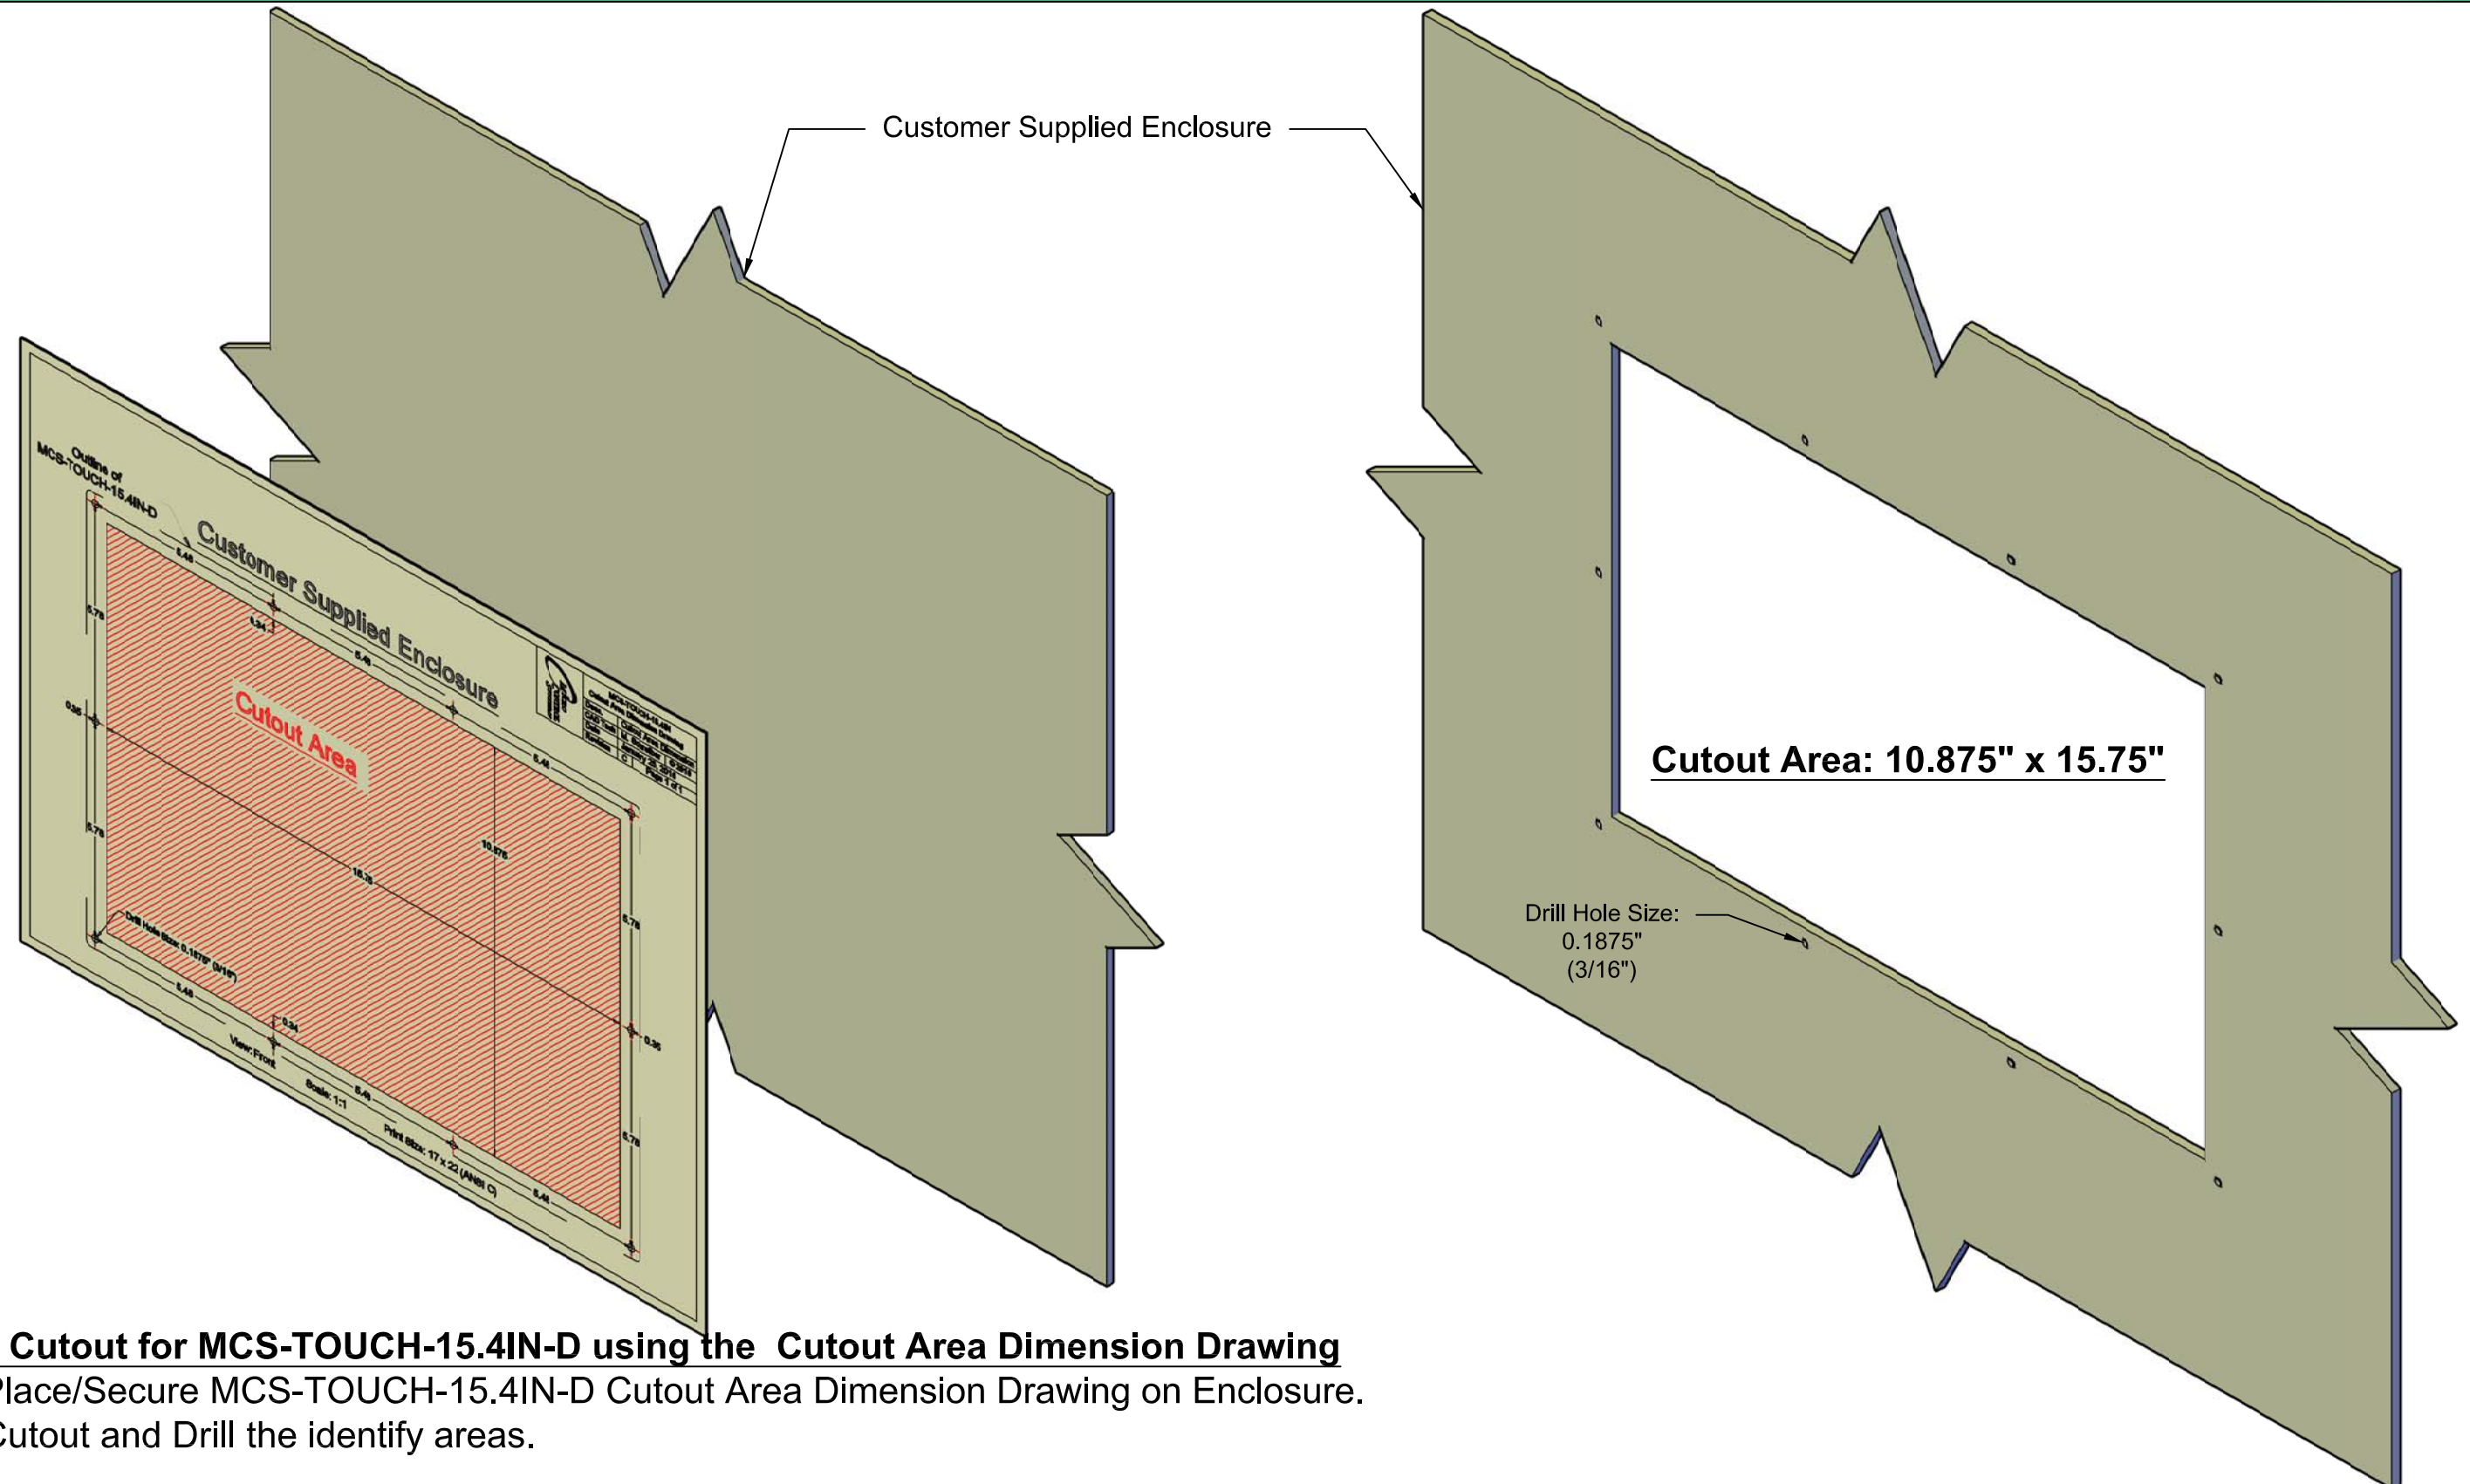


Step 2: Cutout for MCS-TOUCH-15.4IN-D using the Cutout Area Dimension Drawing

- Place/Secure MCS-TOUCH-15.4IN-D Cutout Area Dimension Drawing on Enclosure.
- Cutout and Drill the identify areas.


MCS-TOUCH-15.4IN-D

Mounting MCS-TOUCH-15.4IN-D

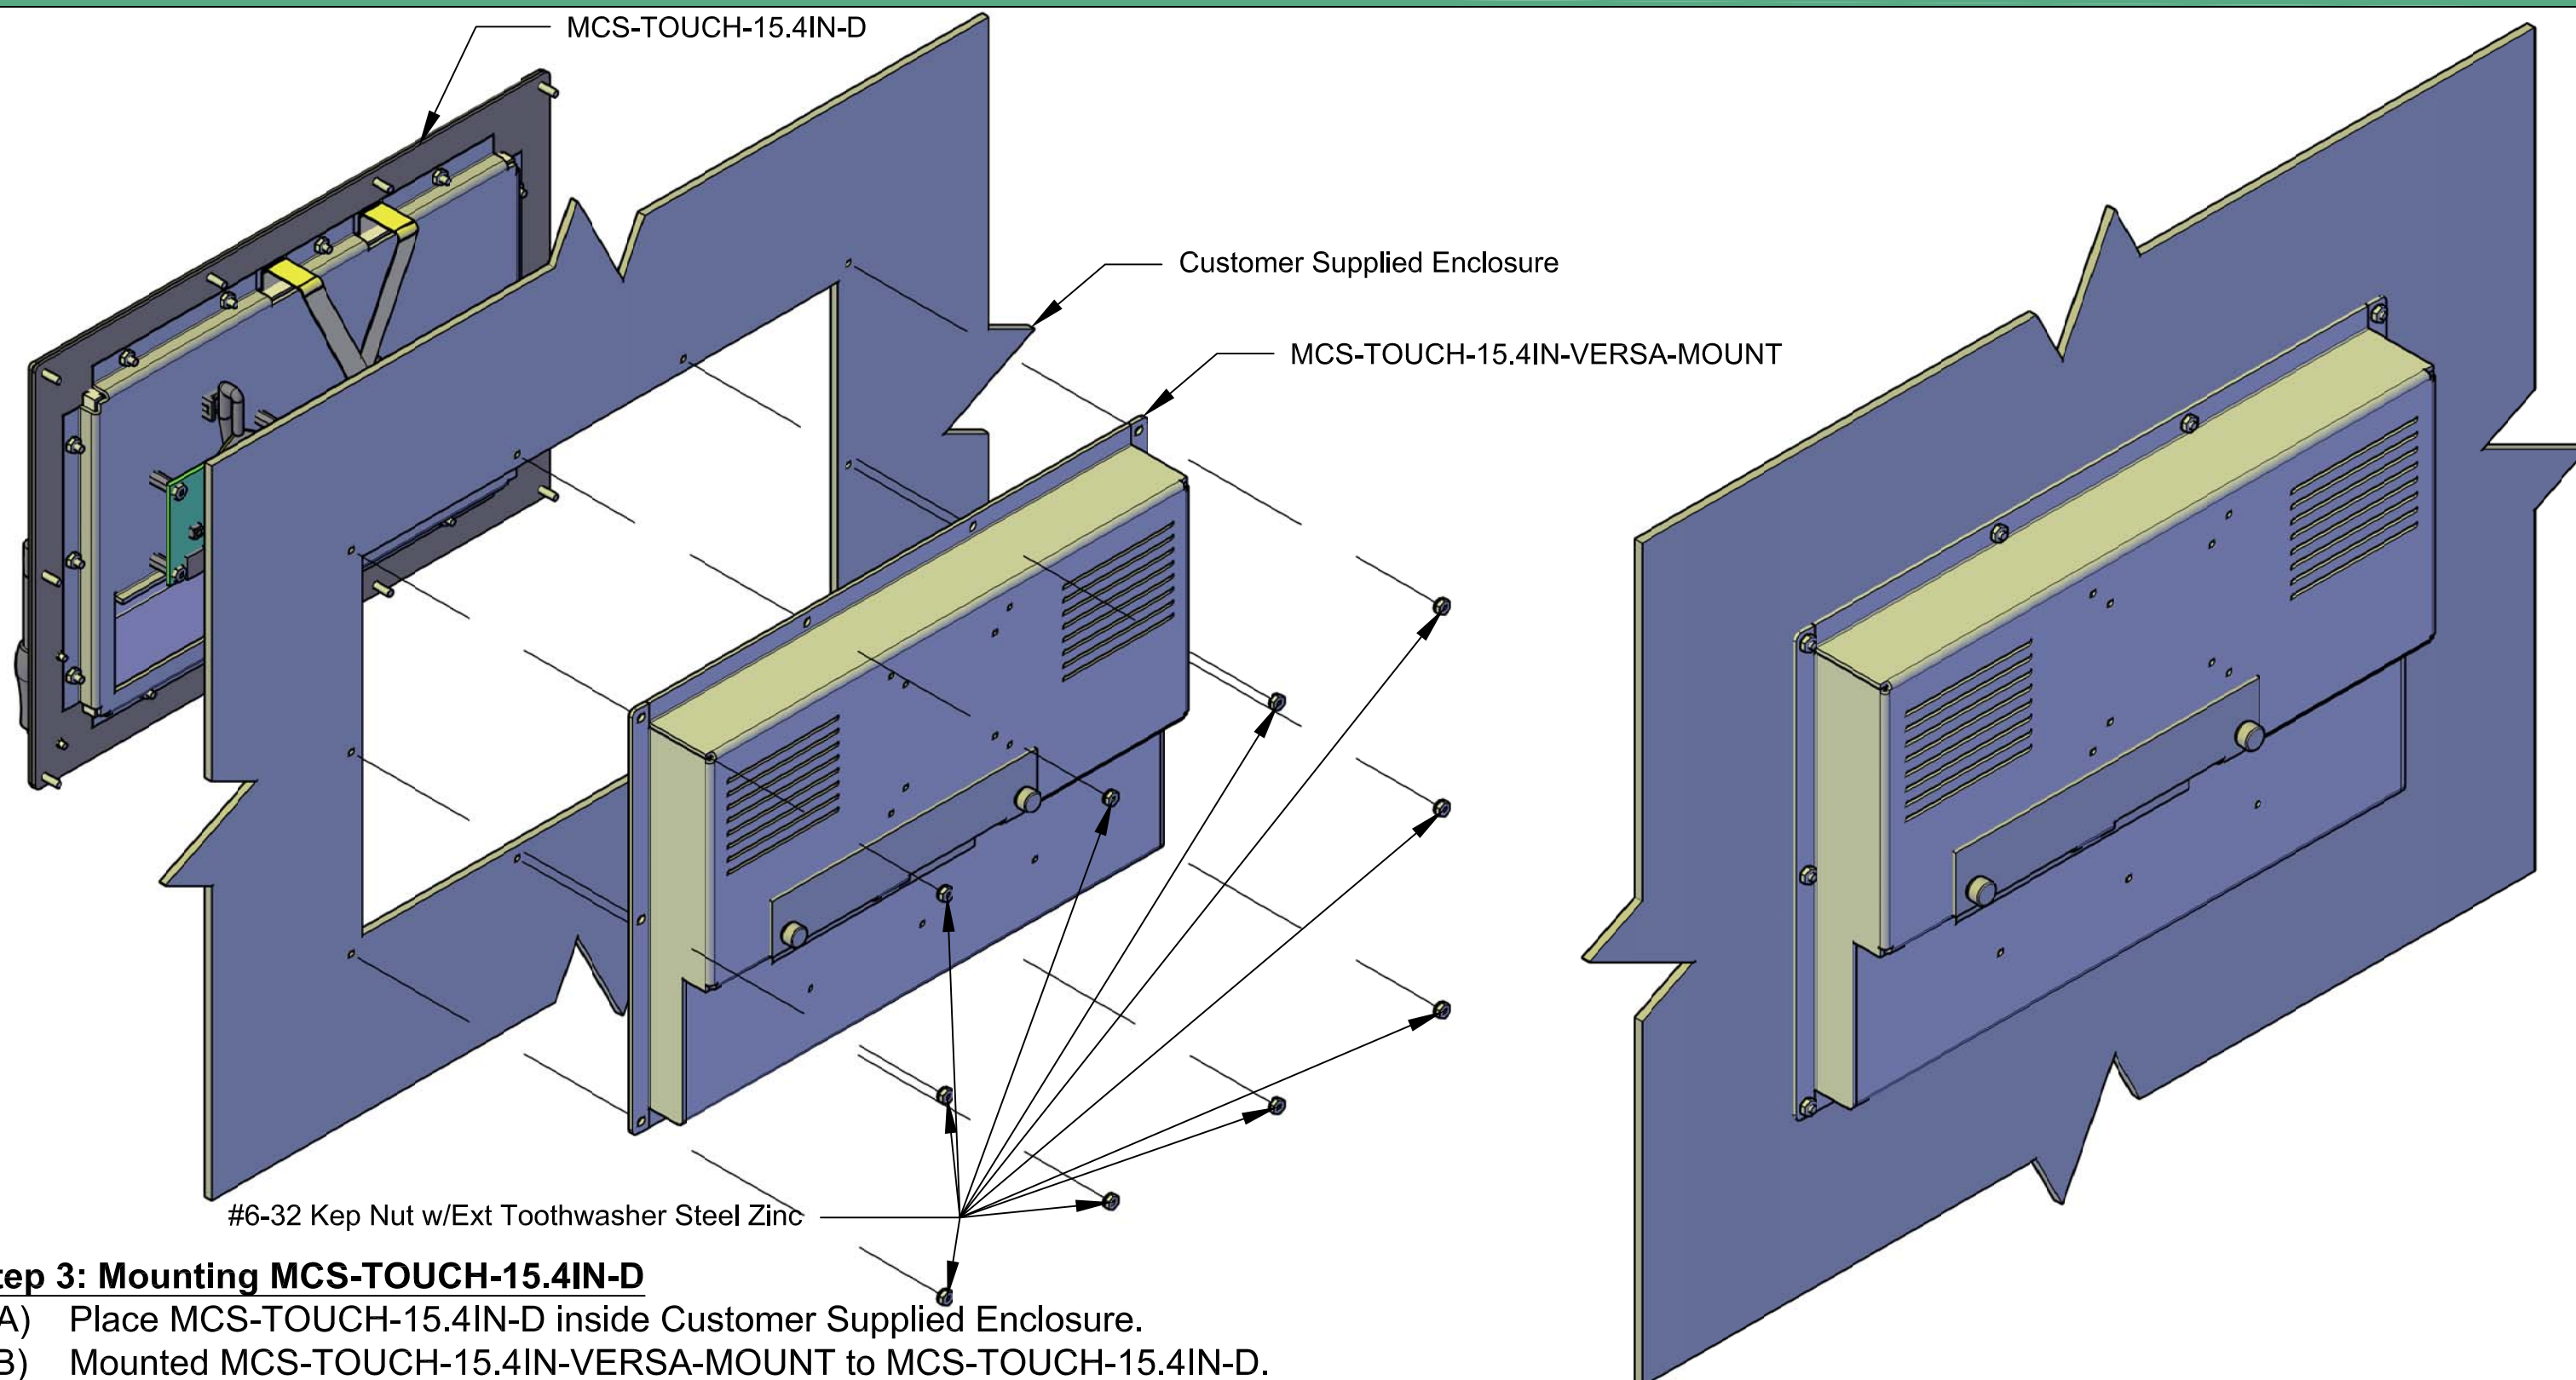



Step 3: Mounting MCS-TOUCH-15.4IN-D

- Place MCS-TOUCH-15.4IN-D inside Customer Supplied Enclosure.
- Mounted MCS-TOUCH-15.4IN-VERSA-MOUNT to MCS-TOUCH-15.4IN-D.
- Secure MCS-TOUCH-15.4IN-D and MCS-TOUCH-15.4IN-VERSA-MOUNT with #6-32 Kep Nut w/Ext Toothwasher Steel Zinc (Qty: 10).

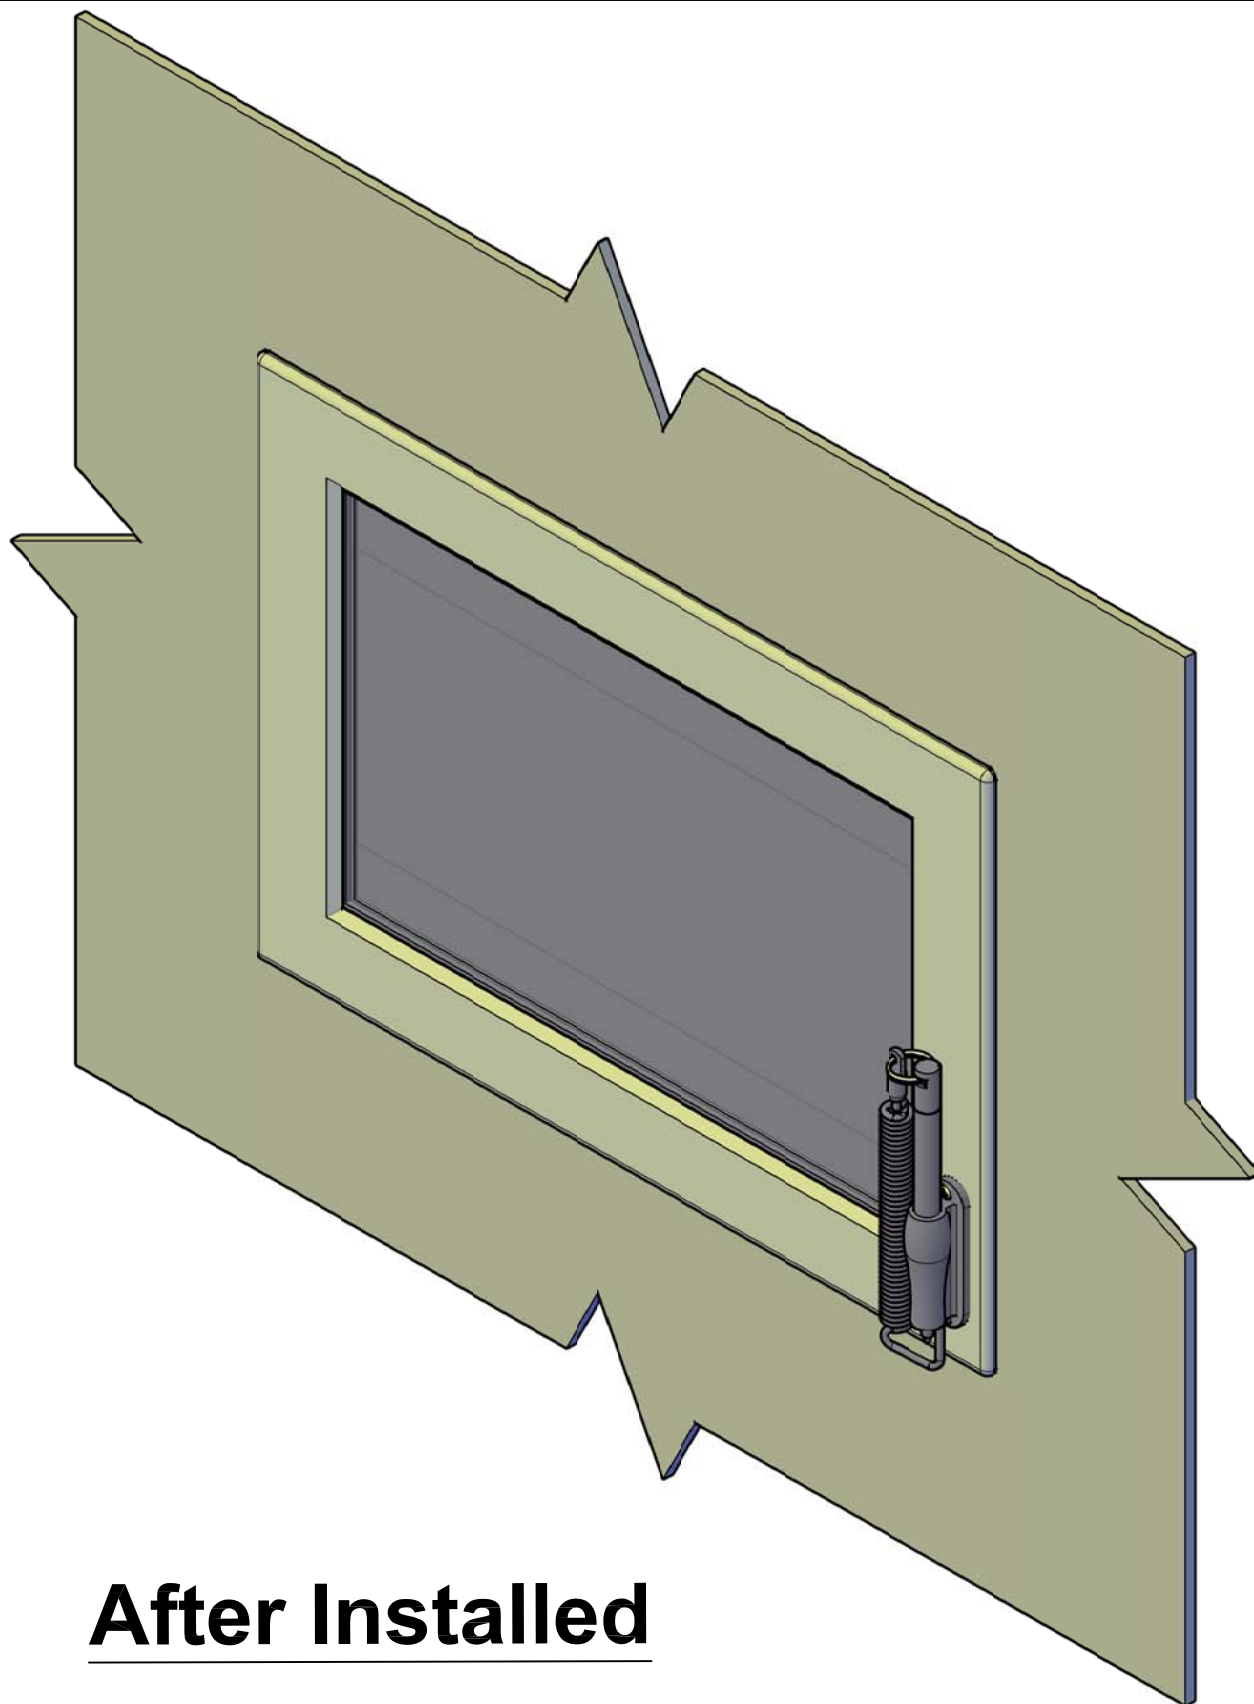


After Installed

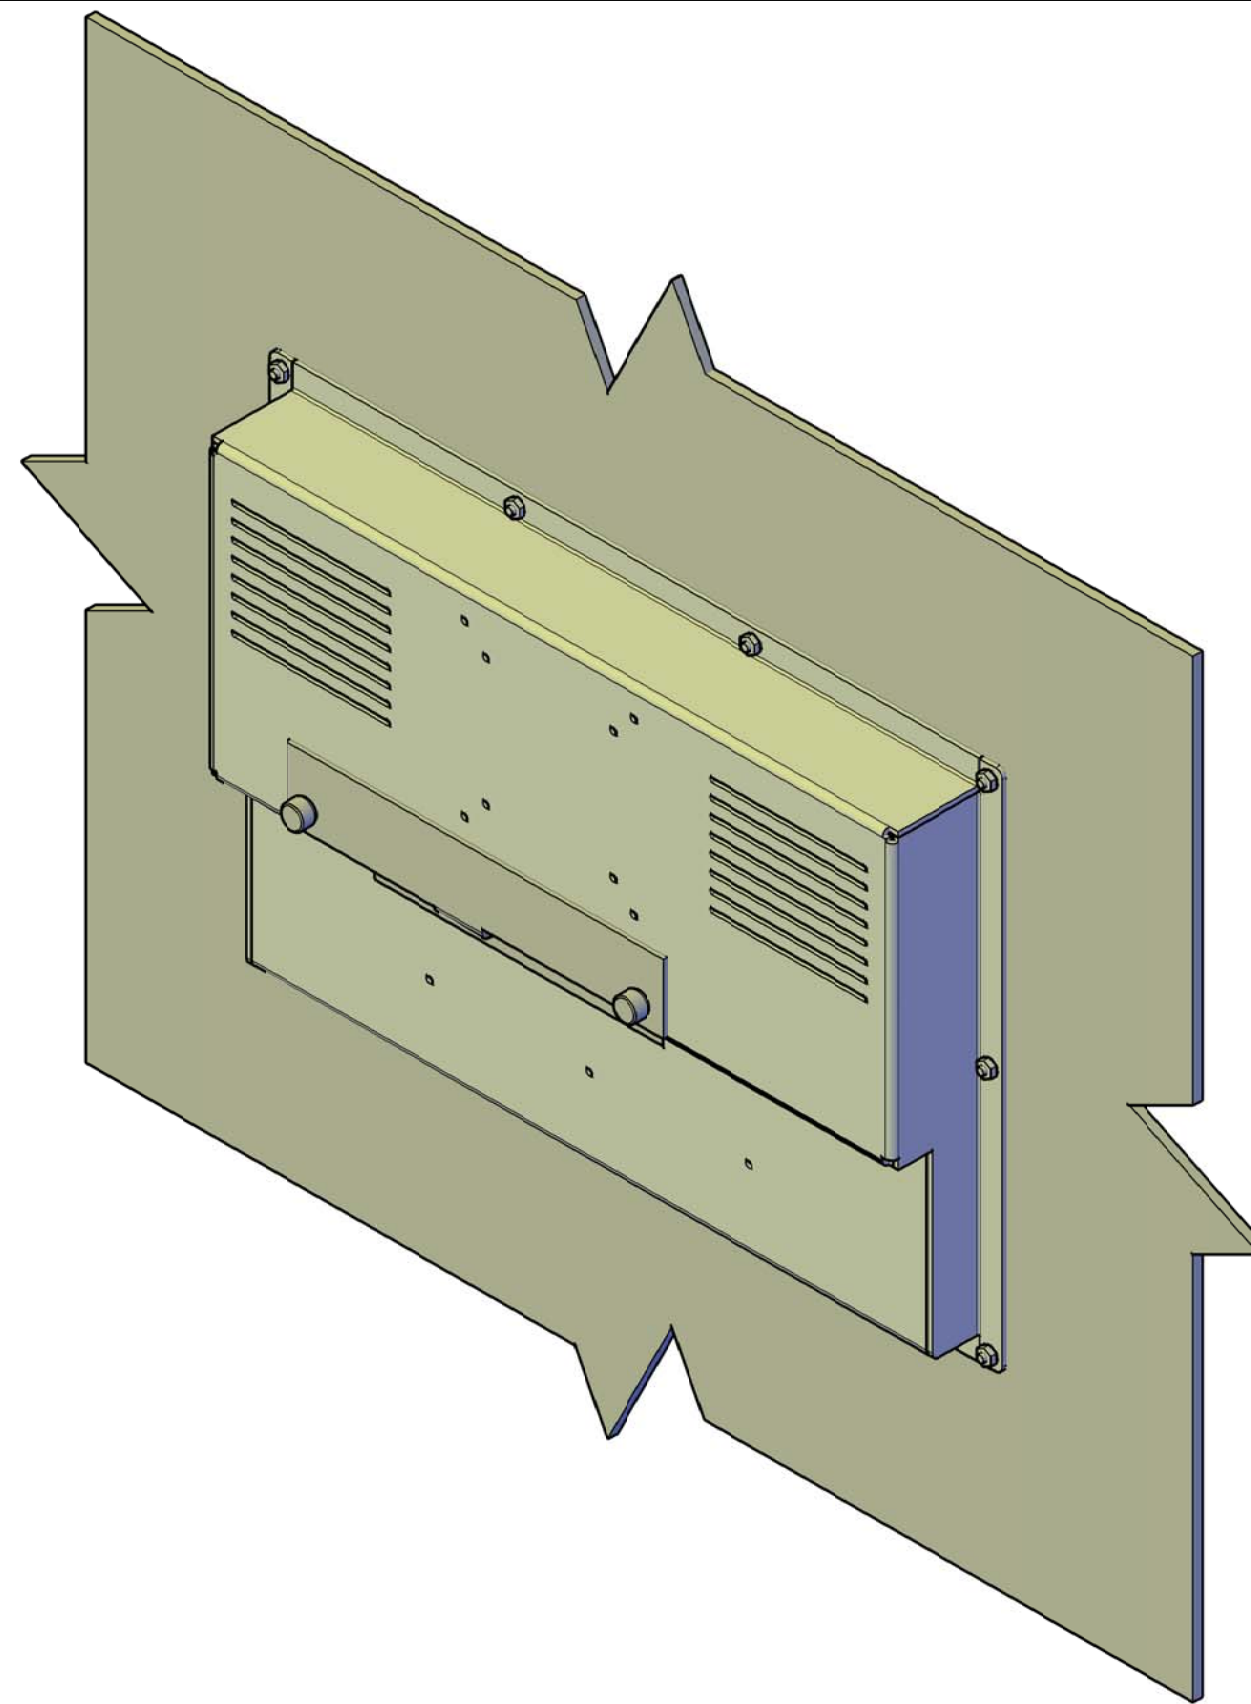


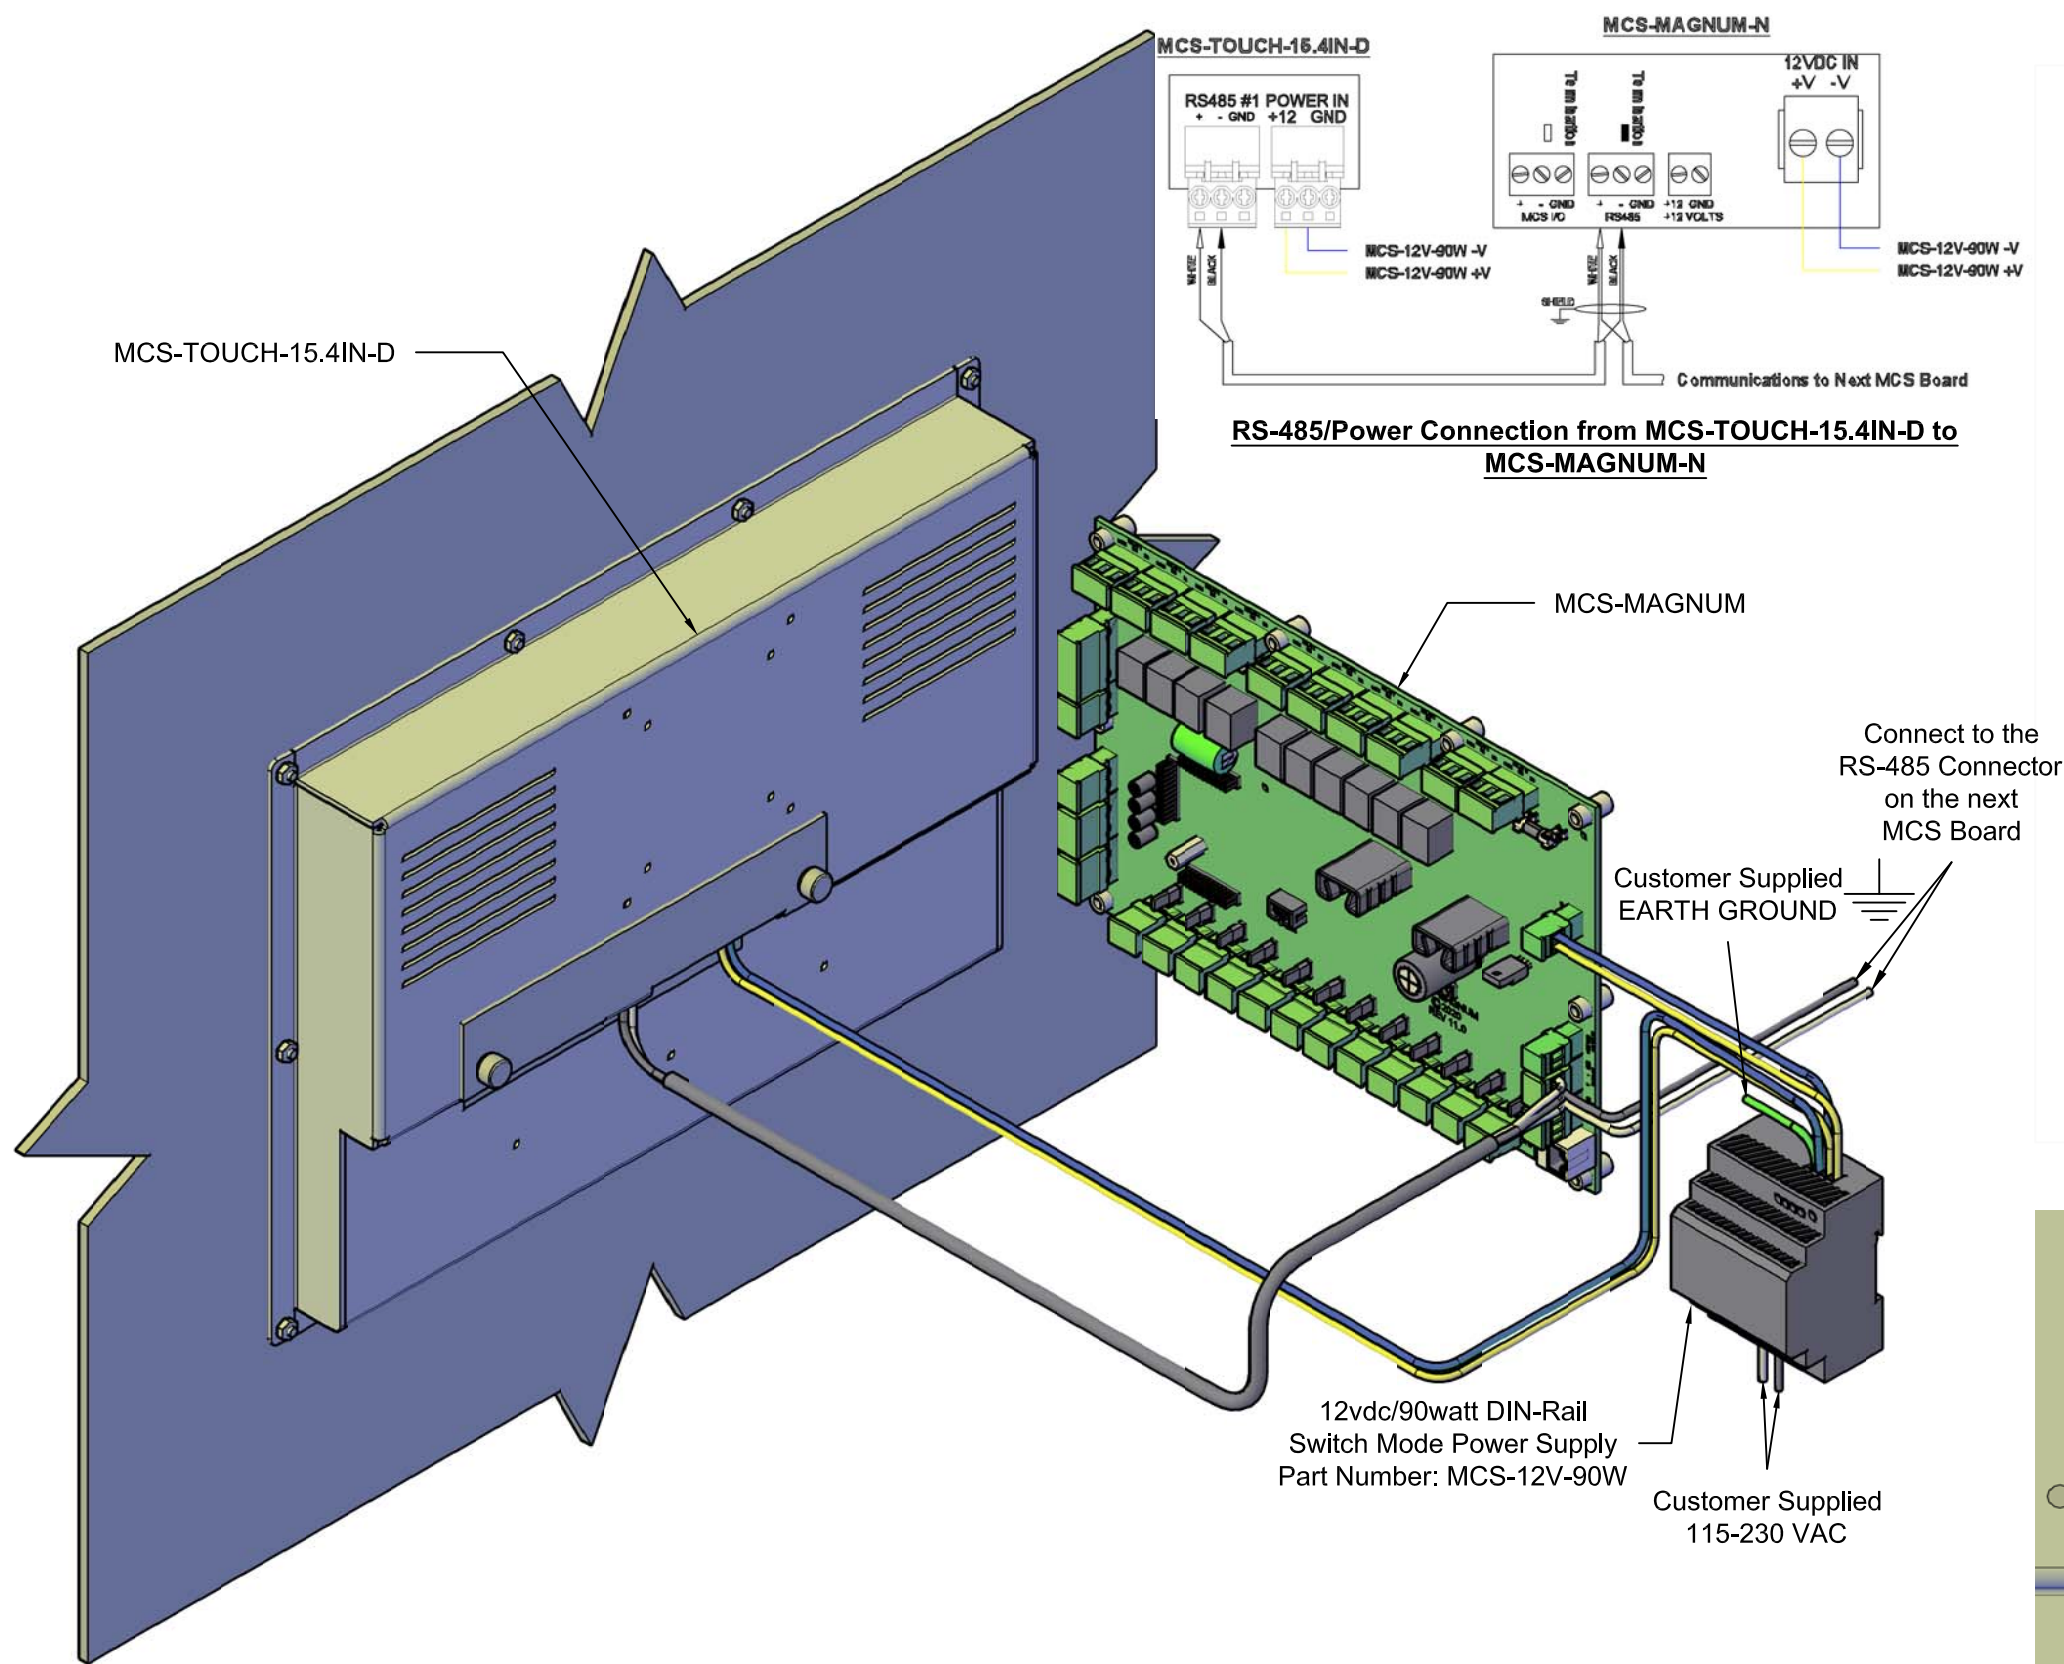

MCS-12V-90W Wiring Diagram

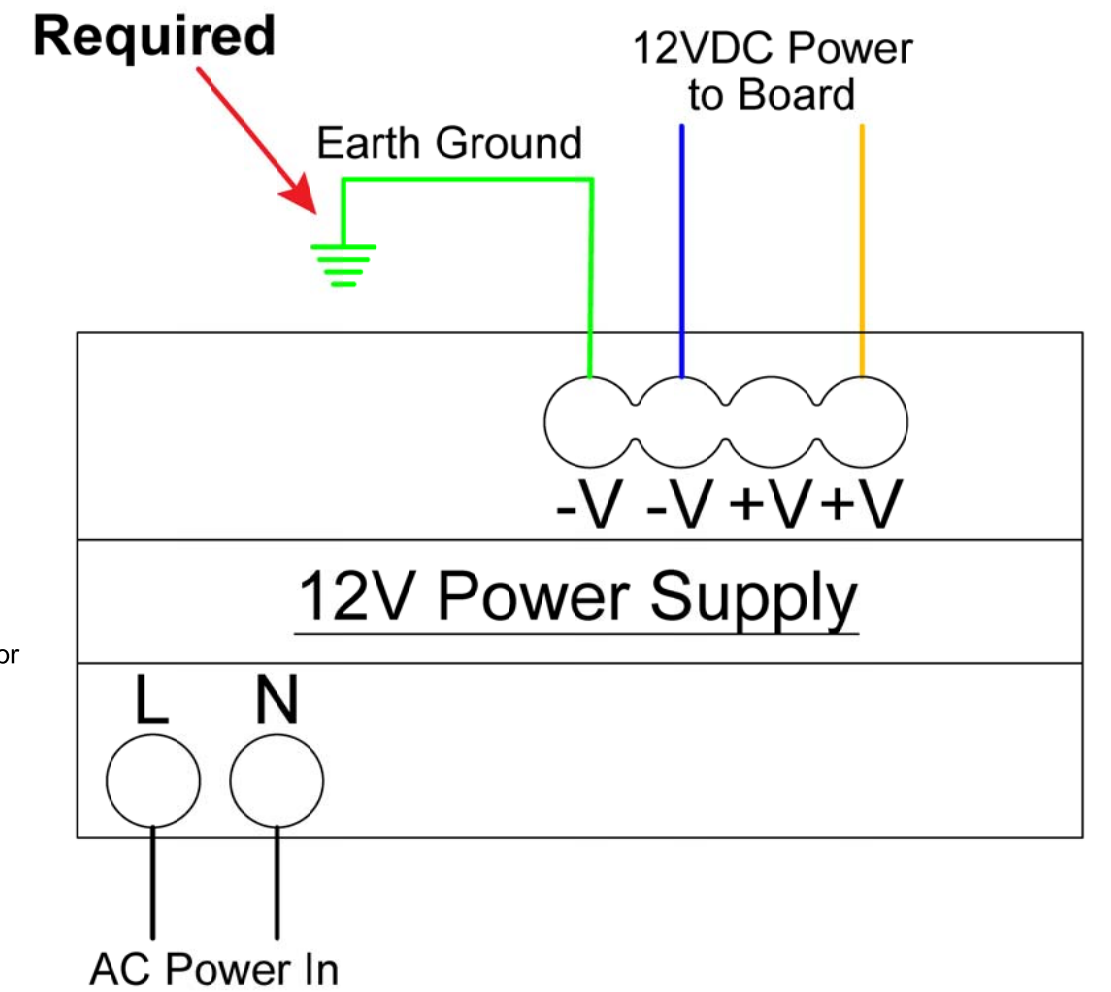


Back of MCS-TOUCH-15.4IN with Cover removed

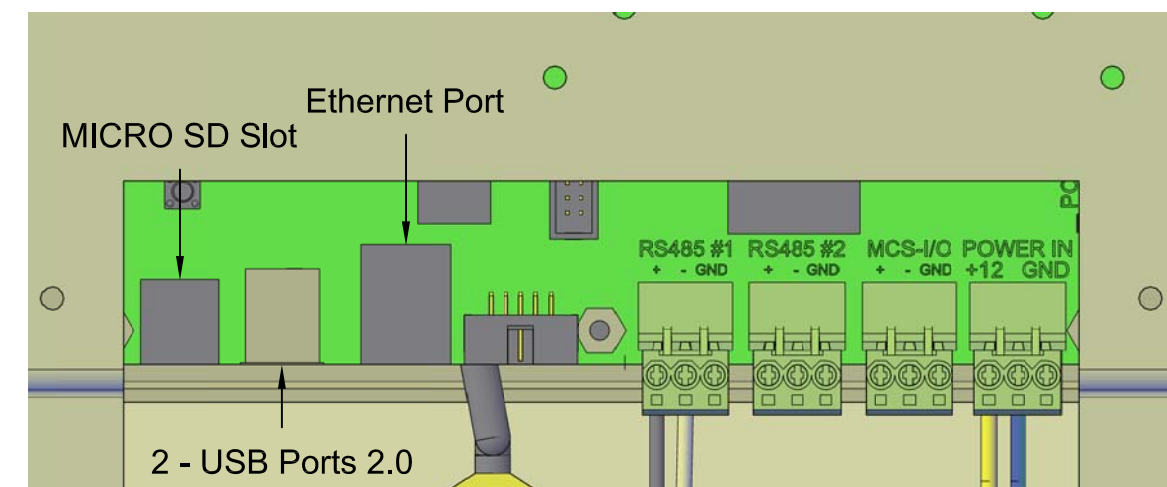


MCS-TOUCH-15.4IN-D

Ethernet-Switch Wiring Drawing

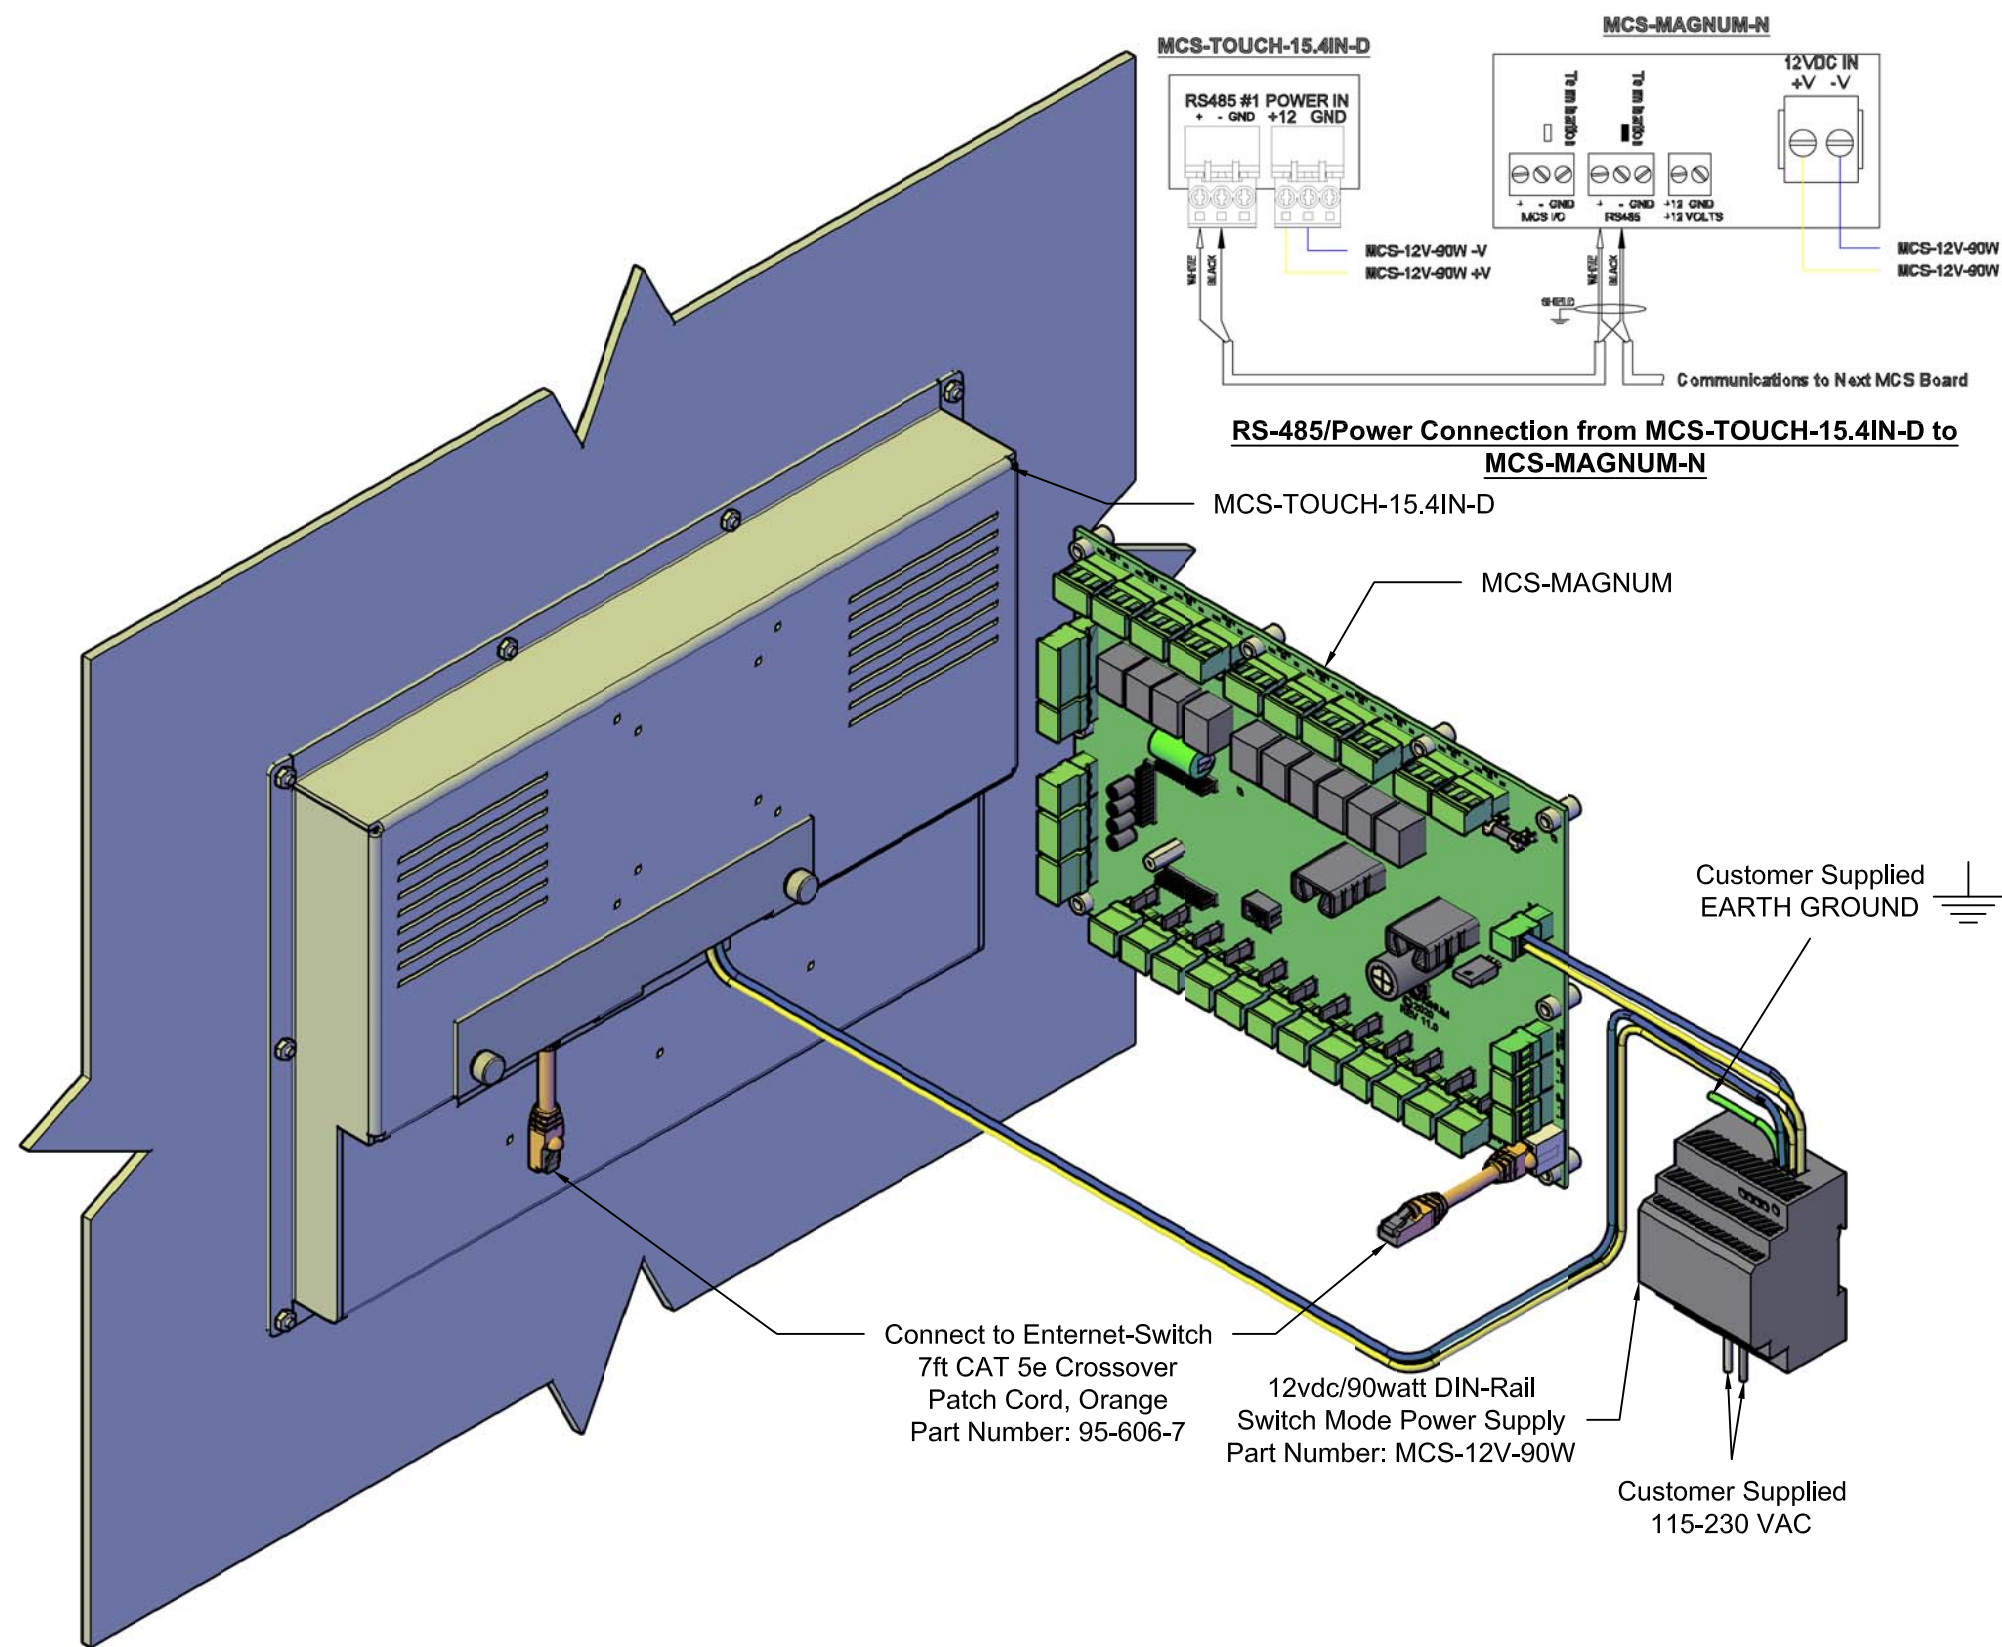

MCS-12V-90W Wiring Diagram

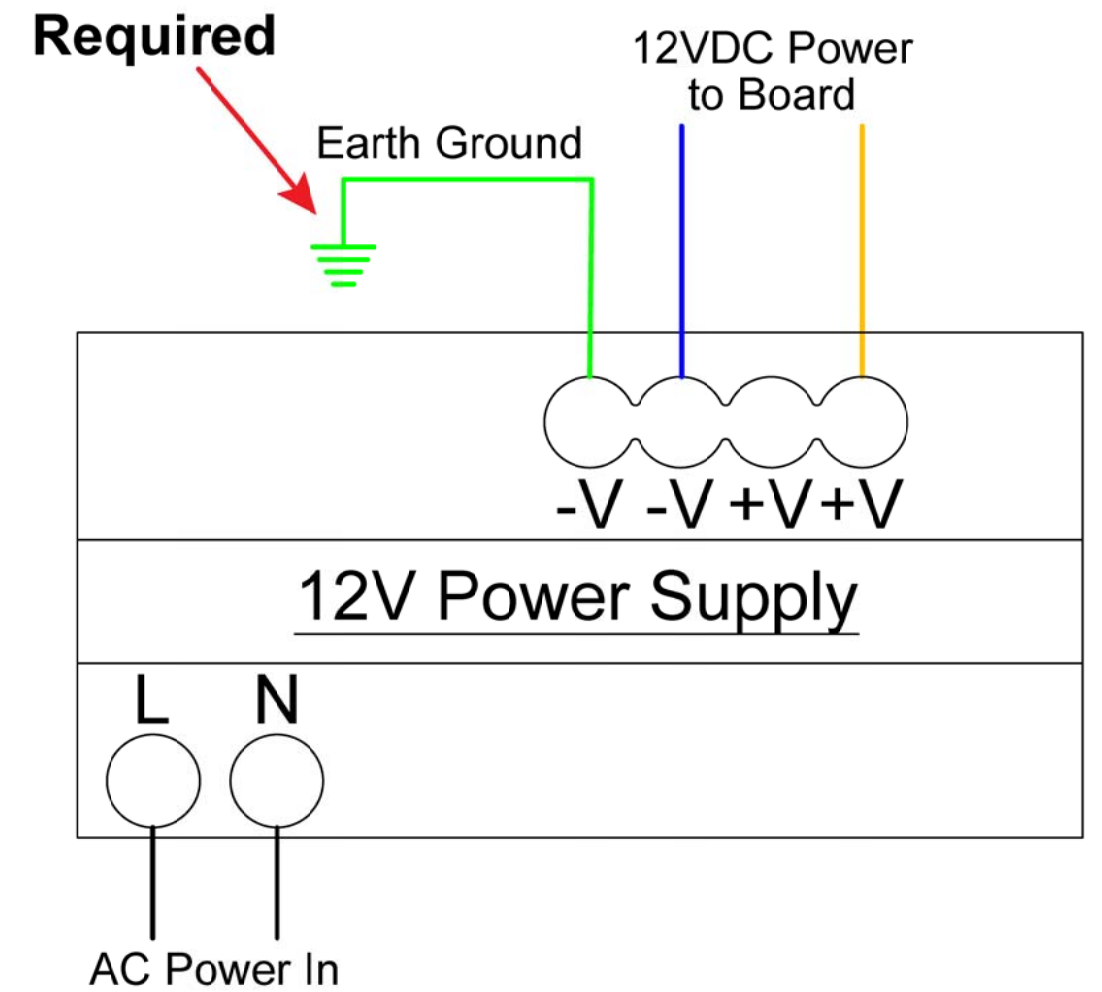

Back of MCS-TOUCH-15.4IN with Cover removed

